

Frei programmierbare Tastatur W60

Drive-Sense
Koordinaten



Drive-Sense-Koordinaten

Grafik

W60



Drive-Sense- Koordinaten

Tabelle

W60

Drive/Sense	0	1	2	3	4	5	6	7
0	T51	T1	T41	T11	T31	T21	X	X
1	X	X	X	X	X	X	X	X
2	T52	T2	T42	T12	T32	T22	X	X
3	X	X	X	X	X	X	X	X
4	T53	T3	T43	T13	T33	T23	X	X
5	X	X	X	X	X	X	X	X
6	T54	T4	T44	T14	T34	T24	X	X
7	X	X	X	X	X	X	X	X
8	T55	T5	T45	T15	T35	T25	X	X
9	X	X	X	X	X	X	X	X
10	T56	T6	T46	T16	T36	T26	X	X
11	T60	T10	T50	T20	T40	T30	X	X
12	T57	T7	T47	T17	T37	T27	X	X
13	T59	T9	T49	T19	T39	T29	X	X
14	T58	T8	T48	T18	T38	T28	X	X
15	X	X	X	X	X	X	X	X